


GT Series

Use Aiphone Card (model NFC-CARD) or Fob (model NFC-FOB) for Access Control


NFC access cards (Type A & F, available from Aiphone) can be registered to the GT-DMB-N entrance station for door entry. Up to 500 cards can be registered using the GT-DMB-N entrance station. The GT entrance station/system will not track or log entry data for these cards. Follow the instructions below to register the NFC card(s).

Programming


Step 1: On the keypad, Push # then enter the programming passcode (default *1111)

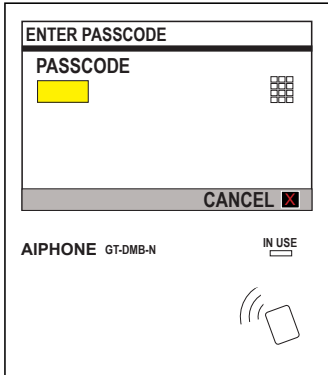


Step 2: Re-enter the programming passcode (default *1111)

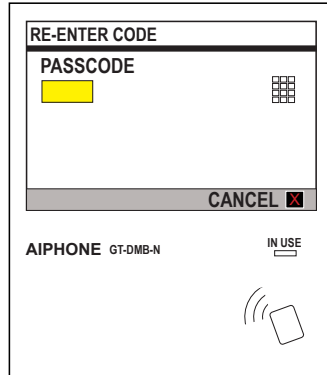


Step 3: Use the down arrow button to scroll to **STATION SETTINGS**. Push the Bell button to select.

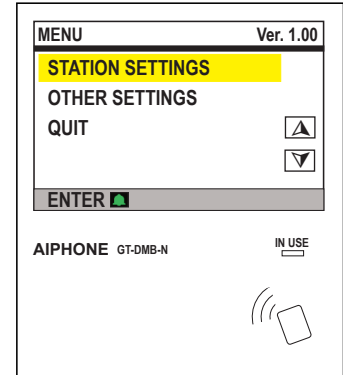


Step 4: Push the Bell button to select **ACCESS CODE**.

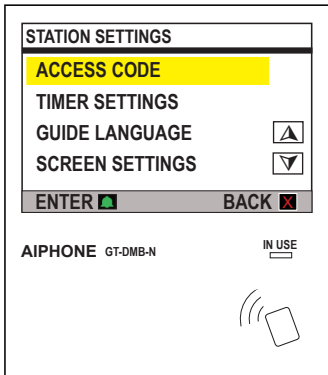


Step 5: Use the down arrow button to scroll to **NFC CARD**. Push the Bell button to select.

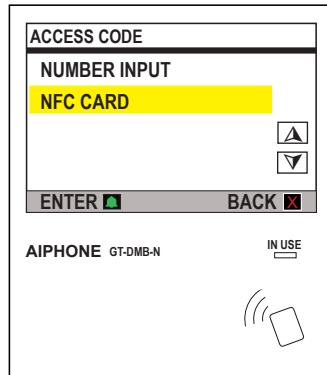


Step 6: Enter an access code (001-500) and push the Bell button to continue.

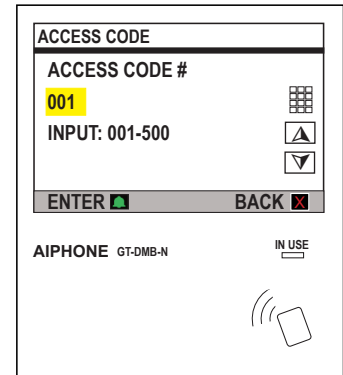


Step 7: Hold an NFC card to the NFC reader on the GT-DMB-N for a few seconds (until code shows).

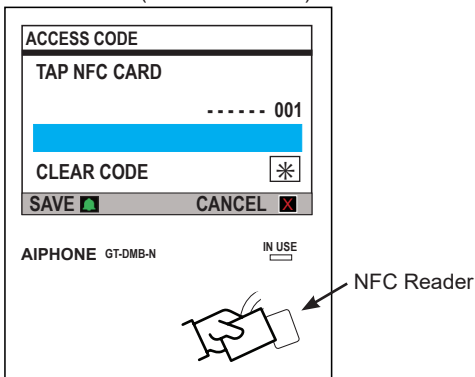

Step 8: You will be asked if you want to register. Push the Bell button to save the registration.

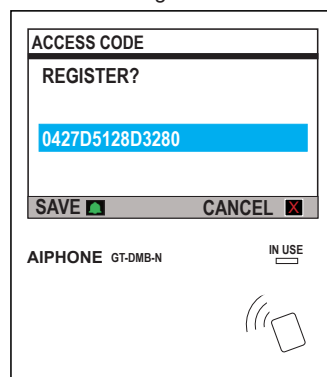

Step 9: The NFC card is now registered. Repeat steps 6-9 for additional NFC cards.

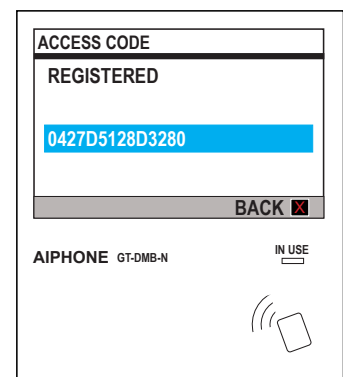

When done registering cards, push the Back button three (3) times then use the down arrow button to scroll to Quit. Once highlighted, push the Bell button to exit programming.

Note: The GT-DMB-N will exit programming after 60 seconds of inactivity.

For more details about the features and information above, please contact Technical Support.

Aiphone Corporation | www.aiphone.com | tech@aiphone.com | (800) 692-0200